




# KNX T-Objekt-UP

## Temperature Sensor

---

Article number 70179

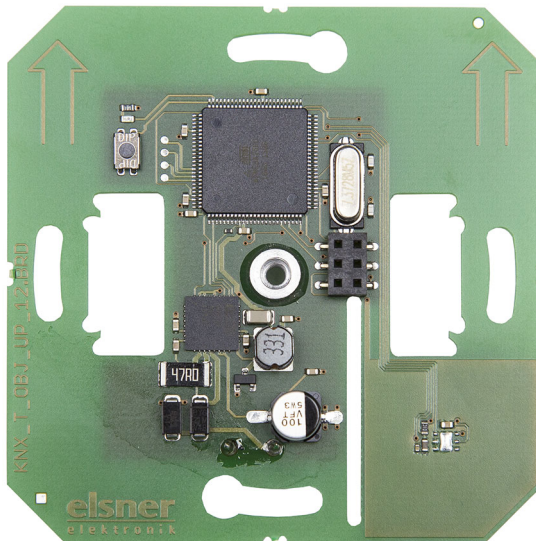

---

**elsner**

**Installation and Adjustment**

---



<b>1. Safety and operating instructions .....</b>	<b>3</b>
<b>2. Description .....</b>	<b>3</b>
<b>3. Commissioning .....</b>	<b>4</b>
3.1. Addressing the equipment .....	4
<b>4. Transfer protocol .....</b>	<b>5</b>
4.1. List of all communications objects .....	5
<b>5. Parameter setting .....</b>	<b>10</b>
5.1. Behaviour on power failure/ restoration of power .....	10
5.2. General settings .....	10
5.3. Temperature measured values .....	11
5.4. Temperature threshold values .....	11
5.4.1. Temperature threshold value 1, 2, 3 .....	11
Threshold value .....	11
Switching output .....	12
Block .....	13
5.5. Temperature PI control .....	14
5.5.1. General set point values .....	15
Set point Comfort .....	16
Set point for standby .....	16
Eco set point .....	17
Set point values for frost/heat protection (building protection) .....	17
General variables .....	18
5.5.2. Heating control level 1/2 .....	18
5.5.3. Cooling control level 1/2 .....	20
5.6. Variable comparator .....	22
5.6.1. Control variable comparator 1/2 .....	22
5.7. Logic .....	23
AND logic .....	23
OR logic .....	23
5.7.1. AND and/or OR logic 1/2/3/4/5/6/7/8 .....	24
Block .....	24
5.7.2. AND logic connection inputs .....	25
5.7.3. Connection inputs of the OR logic .....	26

This manual is amended periodically and will be brought into line with new software releases. The change status (software version and date) can be found in the contents footer. If you have a device with a later software version, please check **www.elsner-elektronik.de** in the menu area "Service" to find out whether a more up-to-date version of the manual is available.

## Clarification of signs used in this manual



Safety advice.



Safety advice for working on electrical connections, components, etc.

### **DANGER!**

... indicates an immediately hazardous situation which will lead to death or severe injuries if it is not avoided.

### **WARNING!**

... indicates a potentially hazardous situation which may lead to death or severe injuries if it is not avoided.

### **CAUTION!**

... indicates a potentially hazardous situation which may lead to trivial or minor injuries if it is not avoided.



**ATTENTION!** ... indicates a situation which may lead to damage to property if it is not avoided.

### ETS

In the ETS tables, the parameter default settings are marked by underlining.

# 1. Safety and operating instructions

---



Installation, testing, operational start-up and troubleshooting should only be performed by an authorised electrician.

---



## **CAUTION!** **Live voltage!**

- Inspect the device for damage before installation. Only put undamaged devices into operation.
  - Comply with the locally applicable directives, regulations and provisions for electrical installation.
  - Immediately take the device or system out of service and secure it against unintentional switch-on if risk-free operation is no longer guaranteed.
- 

Use the device exclusively for building automation and observe the operating instructions. Improper use, modifications to the device or failure to observe the operating instructions will invalidate any warranty or guarantee claims.

Operate the device only as a fixed-site installation, i.e. only in assembled condition and after conclusion of all installation and operational start-up tasks, and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

---

**For information on installation, maintenance, disposal, scope of delivery and technical data, please refer to the installation instructions.**

---

## 2. Description

---

The **Temperature Sensor KNX T-Objekt-UP** measures ambient temperature. The sensor can receive an external measured value via the bus and process it with the own data to an overall temperature (mixed value).

The **KNX T-Objekt-UP** provides switching outputs with adjustable threshold values. The switching outputs and further communication objects can be linked by AND and OR logic gates. Additionally, an integrated actuating variable comparator can compare and output values that are received via communication objects. The sensor has got a PI controller for heating and cooling.

The device is completed with a frame and cover of the switching series installed in the building and thus merges with the interior.

### **Functions:**

- Measurement of **temperature**
- **Mixed value** from own measured value and external value (proportions can be set in percentage)

- **PI controller for heating** (one or two step) and **cooling** (one or two step) depending on temperature. Control according to separate target values or basic target temperature
- **Threshold values** can be adjusted per parameter or via communication objects
- **8 AND and 8 OR logic gates** with each 4 inputs. Every switching incident as well as 8 logic inputs (in the form of communication objects) may be used as inputs for the logic gates. The output of each gate may optionally be configured as 1 bit or 2 x 8 bits
- **2 actuating variable comparators** for output of minimum, maximum or average values. Each with 5 inputs (for values received via communication objects)

## 3. Commissioning

---

---

Configuration is made using the KNX software as of ETS 5. The **product file** can be downloaded from the ETS online catalogue and the Elsner Elektronik website on [www.elsner-elektronik.de](http://www.elsner-elektronik.de).

After the bus voltage has been applied, the device will enter an initialisation phase lasting approx. 6 seconds. During this phase no information can be received or sent via the bus.

### 3.1. Addressing the equipment

---

The equipment is delivered with the bus address 15.15.255. Another address can be programmed using the ETS.

For this purpose there is a button with a control LED on the unit.

## 4. Transfer protocol

### Units:

*Temperatures in degrees Celsius*

*Variables in %*

### 4.1. List of all communications objects

#### Abbreviation flags:

*C* Communication

*R* Read

*W* Write

*T* Transfer

*U* Update

No.	Name	Function	DPT	Flags
0	Software version	readable	217,001	C R T
1	Temperature malfunction sensor	Output	1,001	C R T
3	Outside temperature reading	Input	9,001	C W
4	Inside temperature reading	Output	9,001	C R T
5	Overall temperature reading	Output	9,001	C R T
6	Min./max. temperature value request	Input	1,017	C W
7	Minimum temperature reading	Output	9,001	C R T
8	Maximum temperature reading	Output	9,001	C R T
9	Reset min./max. temperature value	Input	1,017	C W
10	Temp. threshold value 1: Absolute value	Input/Output	9,001	C R W T U
11	Temp. threshold value 1: (1:+   0:-)	Input	1,002	C W
12	Temp. threshold value 1: Switching delay from 0 to 1	Input	7,005	C W
13	Temp. threshold value 1: Switching delay from 1 to 0	Input	7,005	C W
14	Temp. threshold value 1: Switching output	Output	1,001	C R T
15	Temp. threshold value 1: Switching output block	Input	1,002	C W
16	Temp. threshold value 2: Absolute value	Input/Output	9,001	C R W T U
17	Temp. threshold value 2: (1:+   0:-)	Input	1,002	C W
18	Temp. threshold value 2: Switching delay from 0 to 1	Input	7,005	C W

No.	Name	Function	DPT	Flags
19	Temp. threshold value 2: Switching delay from 1 to 0	Input	7,005	C W
20	Temp. threshold value 2: Switching output	Output	1,001	C R T
21	Temp. threshold value 2: Switching output block	Input	1,002	C W
22	Temp. threshold value 3: Absolute value	Input/Output	9,001	C R W T U
23	Temp. threshold value 3: (1:+   0:-)	Input	1,002	C W
24	Temp. threshold value 3: Switching delay from 0 to 1	Input	7,005	C W
25	Temp. threshold value 3: Switching delay from 1 to 0	Input	7,005	C W
26	Temp. threshold value 3: Switching output	Output	1,001	C R T
27	Temp. threshold value 3: Switching output block	Input	1,002	C W
28	Reserve			
29	TR_1_ Eco-Standby HVAC 1	Input	1,003	C W
30	TR_1_ Comfort Activation HVAC 2	Input	1,003	C W
31	TR_1_ Frost/Heat activation	Input	1,003	C R W T
32	TR_1_ Blocking object	Input	1,003	C W
33	TR_1_ Target value, current	Output	9,001	C R T
34	TR_1_ Switching object (0:Heat   1:Cool)	Input	1,002	C W
35	TR_1_ Target value, comfort heating	Input/Output	9,001	C R W T
36	TR_1_ Target value, comfort heating (1:+   0:-)	Input	1,002	C W
37	TR_1_ Target value, comfort cooling	Input/Output	9,001	C R W T
38	TR_1_ Target value, comfort cooling (1:+   0:-)	Input	1,002	C W
39	TR_1_ Target value_Basic offset	Input/Output	9,001	C R W T
40	TR_1_ Target value, Standby heating	Input/Output	9,001	C R W T
41	TR_1_ Target value, Standby heating (1:+   0:-)	Input	1,002	C W
42	TR_1_ Target value, Standby cooling	Input/Output	9,001	C R W T
43	TR_1_ Target value, Standby cooling (1:+   0:-)	Input	1,002	C W
44	TR_1_ Target value, Eco heating	Input/Output	9,001	C R W T
45	TR_1_ Target value, Eco heating (1:+   0:-)	Input	1,002	C W
46	TR_1_ Target value, Eco cooling	Input/Output	9,001	C R W T



No.	Name	Function	DPT	Flags
47	TR_1_ Target value, Eco cooling (1:+   0:-)	Input	1,002	C W
48	TR_1_ Control variable heating (stage 1)	Output	5,001	C R T
49	TR_1_ Control variable heating stage 2	Output	5,001	C R T
50	TR_1_ Control variable cooling (stage 1)	Output	5,001	C R T
51	TR_1_ Control variable cooling stage 2	Output	5,001	C R T
52	TR_1_ Status heating 1 (1=ON   0=OFF)	Output	1,002	C R T
53	TR_1_ Status heating 2 (1=ON   0=OFF)	Output	1,002	C R T
54	TR_1_ Cooling status 1 (1=ON   0=OFF)	Output	1,002	C R T
55	TR_1_ Cooling status 2 (1=ON   0=OFF)	Output	1,002	C R T
56	TR_1_ Comfort Delay Status	Input/Output	1,002	C R W T
57	TR_1_ Comfort extension time (in sec)	Input/Output	7,005	C R W T
58	TR_1_Belimo_Control variable	Output	5,001	C R T
135	Comparator 1 actuating variable: Input 1	Input	5,010	C W
136	Comparator 1 actuating variable: Input 2	Input	5,010	C W
137	Comparator 1 actuating variable: Input 3	Input	5,010	C W
138	Comparator 1 actuating variable: Input 4	Input	5,010	C W
139	Comparator 1 actuating variable: Input 5	Input	5,010	C W
140	Comparator 1 actuating variable: Output	Output	1,001	C R T
141	Comparator 1 actuating variable: Block	Input	1,002	C W
142	Comparator 2 actuating variable: Input 1	Input	5,010	C W
143	Comparator 2 actuating variable: Input 2	Input	5,010	C W
144	Comparator 2 actuating variable: Input 3	Input	5,010	C W
145	Comparator 2 actuating variable: Input 4	Input	5,010	C W

No.	Name	Function	DPT	Flags
146	Comparator 2 actuating variable: Input 5	Input	5,010	C W
147	Comparator 2 actuating variable: Output	Output	1,001	C R T
148	Comparator 2 actuating variable: Block	Input	1,002	C W
149	AND logic 1: 1-bit switching output	Output	1,002	C R T
150	AND logic 1: 8-bit output A	Output	5,010	C R T
151	AND logic 1: 8-bit output B	Output	5,010	C R T
152	AND logic 1: Block	Input	1,002	C W
153	AND logic 2: 1-bit switching output	Output	1,002	C R T
154	AND logic 2: 8-bit output A	Output	5,010	C R T
155	AND logic 2: 8-bit output B	Output	5,010	C R T
156	AND logic 2: Block	Input	1,002	C W
157	AND logic 3: 1-bit switching output	Output	1,002	C R T
158	AND logic 3: 8-bit output A	Output	5,010	C R T
159	AND logic 3: 8-bit output B	Output	5,010	C R T
160	AND logic 3: Block	Input	1,002	C W
161	AND logic 4: 1-bit switching output	Output	1,002	C R T
162	AND logic 4: 8-bit output A	Output	5,010	C R T
163	AND logic 4: 8-bit output B	Output	5,010	C R T
164	AND logic 4: Block	Input	1,002	C W
165	AND logic 5: 1-bit switching output	Output	1,002	C R T
166	AND logic 5: 8-bit output A	Output	5,010	C R T
167	AND logic 5: 8-bit output B	Output	5,010	C R T
168	AND logic 5: Block	Input	1,002	C W
169	AND logic 6: 1-bit switching output	Output	1,002	C R T
170	AND logic 6: 8-bit output A	Output	5,010	C R T
171	AND logic 6: 8-bit output B	Output	5,010	C R T
172	AND logic 6: Block	Input	1,002	C W
173	AND logic 7: 1-bit switching output	Output	1,002	C R T
174	AND logic 7: 8-bit output A	Output	5,010	C R T
175	AND logic 7: 8-bit output B	Output	5,010	C R T
176	AND logic 7: Block	Input	1,002	C W
177	AND logic 8: 1-bit switching output	Output	1,002	C R T
178	AND logic 8: 8-bit output A	Output	5,010	C R T
179	AND logic 8: 8-bit output B	Output	5,010	C R T
180	AND logic 8: Block	Input	1,002	C W
181	OR logic 1: 1-bit switching output	Output	1,002	C R T
182	OR logic 1: 8-bit output A	Output	5,010	C R T

No.	Name	Function	DPT	Flags
183	OR logic 1: 8-bit output B	Output	5,010	C R T
184	OR logic 1: Block	Input	1,002	C W
185	OR logic 2: 1-bit switching output	Output	1,002	C R T
186	OR logic 2: 8-bit output A	Output	5,010	C R T
187	OR logic 2: 8-bit output B	Output	5,010	C R T
188	OR logic 2: Block	Input	1,002	C W
189	OR logic 3: 1-bit switching output	Output	1,002	C R T
190	OR logic 3: 8-bit output A	Output	5,010	C R T
191	OR logic 3: 8-bit output B	Output	5,010	C R T
192	OR logic 3: Block	Input	1,002	C W
193	OR logic 4: 1-bit switching output	Output	1,002	C R T
194	OR logic 4: 8-bit output A	Output	5,010	C R T
195	OR logic 4: 8-bit output B	Output	5,010	C R T
196	OR logic 4: Block	Input	1,002	C W
197	OR logic 5: 1-bit switching output	Output	1,002	C R T
198	OR logic 5: 8-bit output A	Output	5,010	C R T
199	OR logic 5: 8-bit output B	Output	5,010	C R T
200	OR logic 5: Block	Input	1,002	C W
201	OR logic 6: 1-bit switching output	Output	1,002	C R T
202	OR logic 6: 8-bit output A	Output	5,010	C R T
203	OR logic 6: 8-bit output B	Output	5,010	C R T
204	OR logic 6: Block	Input	1,002	C W
205	OR logic 7: 1-bit switching output	Output	1,002	C R T
206	OR logic 7: 8-bit output A	Output	5,010	C R T
207	OR logic 7: 8-bit output B	Output	5,010	C R T
208	OR logic 7: Block	Input	1,002	C W
209	OR logic 8: 1-bit switching output	Output	1,002	C R T
210	OR logic 8: 8-bit output A	Output	5,010	C R T
211	OR logic 8: 8-bit output B	Output	5,010	C R T
212	OR logic 8: Block	Input	1,002	C W
213	Logic input 1	Input	1,002	C W
214	Logic input 2	Input	1,002	C W
215	Logic input 3	Input	1,002	C W
216	Logic input 4	Input	1,002	C W
217	Logic input 5	Input	1,002	C W
218	Logic input 6	Input	1,002	C W
219	Logic input 7	Input	1,002	C W
220	Logic input 8	Input	1,002	C W
221	Logic input 9	Input	1,002	C W

No.	Name	Function	DPT	Flags
222	Logic input 10	Input	1,002	C W
223	Logic input 11	Input	1,002	C W
224	Logic input 12	Input	1,002	C W
225	Logic input 13	Input	1,002	C W
226	Logic input 14	Input	1,002	C W
227	Logic input 15	Input	1,002	C W
228	Logic input 16	Input	1,002	C W

## 5. Parameter setting

### 5.1. Behaviour on power failure/ restoration of power

#### ***Behaviour following a failure of the bus power supply:***

The device sends nothing.

#### ***Behaviour on bus restoration of power and following programming or reset:***

The device sends all outputs according to their send behaviour set in the parameters with the delays established in the "General settings" parameter block. The "Software version" communications object is sent once after 5 seconds.

### 5.2. General settings

Set the basic data transfer characteristics and select whether or not malfunction objects should be sent.

Send delay after power-up and programming for:	
Measured values	<u>5 s</u> • ... • 2 h
Threshold values and switching outputs	<u>5 s</u> • ... • 2 h
Controller objects	5 s • <u>10 s</u> • ... • 2 h
Logic outputs	5 s • <u>10 s</u> • ... • 2 h
Maximum telegram quota	<ul style="list-style-type: none"> <li>• 1 message per second</li> <li>• ...</li> <li>• <u>5 messages per second</u></li> <li>• ...</li> <li>• 20 messages per second</li> </ul>
Use temp./humidity malfunction object	Yes • <u>No</u>
Use CO2 malfunction object	Yes • <u>No</u>

## 5.3. Temperature measured values

When **measuring temperature**, the self-heating of the device is considered by the electronics. The heating is compensated for in the device.

Use **Offsets** to adjust the readings to be sent.

Permanent measurement variations can be corrected in this way.

Offset in 0.1°C	-50...50; <u>0</u>
-----------------	--------------------

The unit can calculate a **mixed value** from its own reading and an external value. Set the mixed value calculation if desired.

Use external reading	Yes • <u>No</u>
Ext. Reading proportion of the total reading	5% • 10% • ... • <u>50%</u> • ... • 100%
Send internal and total reading	<ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• periodically</li> <li>• On change</li> <li>• on change and periodically</li> </ul>
From change of (if sent on change)	0.1°C • <u>0.2°C</u> • ... • 5.0°C
Send cycle (if sent periodically)	<u>5 s</u> • ... • 2 h

**Note:** if an external portion is used, all of the following settings (threshold values, etc.) are related to the overall reading!

The **minimum and maximum readings** can be saved and sent to the bus. Use the "Reset temperature min/max. value" objects to reset the values to the current reading.

Use minimum/maximum value	Yes • <u>No</u>
---------------------------	-----------------

**Note:** The values are not retained after a reset.

## 5.4. Temperature threshold values

Activate the threshold values that you want to use here. The **Sensor KNX-T-Objekt-UP** provides three threshold values for temperature.

Use threshold value 1/2/3	Yes • <u>No</u>
---------------------------	-----------------

### 5.4.1. Temperature threshold value 1, 2, 3

#### Threshold value

Set the threshold values directly in the application program using parameters, or define them via the bus using a communications object.

**Threshold value setpoint using parameter:**

Set the threshold values and hysteresis directly.

Threshold value setpoint using	<b>Parameter • Communications object</b>
<i>Temperature:</i> Threshold value in 0.1°C	-300 ... 800; <u>200</u>
<i>Humidity:</i> Threshold value in % rH	0...100; <u>70</u>
Hysteresis of the threshold value in %	0 ... 50; <u>20</u>

**Threshold value setpoint using a communications object:**

Beforehand, enter how the threshold value will be received from the bus. Basically, a new value can be received, or simply a command to increase or decrease.

During initial commissioning, a threshold value must be defined which will be valid until the 1st communication of a new threshold value. For units which have already been taken into service, the last communicated threshold value can be used. Basically, a temperature range is given in which the threshold value can be changed (object value limit).

A set threshold value will be retained until a new value or a change is transferred. The current value is saved in EEPROM, so that this is retained in the event of a power supply failure and will be available once the power supply is restored.

Threshold value setpoint using	<b>Parameter • Communications object</b>
The last communicated value should be retained	<ul style="list-style-type: none"> <li>• <u>never</u></li> <li>• after restoration of power</li> <li>• after restoration of power and programming</li> </ul>
Start threshold value in 0.1°C valid till 1st communication	-300 ... 800; <u>200</u>
Object value limit (min) in 0.1°C	<u>-300</u> ...800
Object value limit (max) in 0.1°C	-300... <u>800</u>
Type of threshold change	<u>Absolute value</u> • Increase/decrease
Step size (upon increase/decrease change)	0.1°C • ... • <u>1°C</u> • ... • 5°C
Hysteresis of the threshold value in %	0 ... 50; <u>20</u>

**Switching output**

Set the behaviour of the switching output when a threshold value is exceeded/undercut. The output switching delay can be set using objects or directly as a parameter.

When the following conditions apply, the output is (LV = Threshold value)	<ul style="list-style-type: none"> <li>• LV above = 1  LV - hysteresis below = 0</li> <li>• LV above = 0  LV - hysteresis below = 1</li> <li>• <u>LV below = 1  LV + hysteresis above = 0</u></li> <li>• LV below = 0  LV + hysteresis above = 1</li> </ul>
Delays can be set via objects (in seconds)	<u>No</u> • Yes

Switching delay from 0 to 1 <i>(when delay is not set using objects)</i>	<u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h
Switching delay from 1 to 0 <i>(when delay is not set using objects)</i>	<u>None</u> • 1 s • 2 s • 5 s • 10 s • ... • 2 h
Switching output sends	<ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul>
Send cycle <i>(is only sent if "periodically" is selected)</i>	<u>5 s</u> • 10 s • 30 s... • 2 h

## Block

The switching output can be blocked using an object. Define specifications here for the behaviour of the output when blocked.

Use switching output block	<u>No</u> • Yes
Analysis of the blocking object	<ul style="list-style-type: none"> <li>• <u>At value 1: block</u>   At value 0: release</li> <li>• At value 0: block   At value 1: release</li> </ul>
Blocking object value before 1st communication	<u>0</u> • 1
Behaviour of the switching output	
With blocking	<ul style="list-style-type: none"> <li>• <u>Do not send message</u></li> <li>• send 0</li> <li>• send 1</li> </ul>
On release <i>(with 2 seconds release delay)</i>	[Dependent on the "Switching output sends" setting]

The behaviour of the switching output on release is dependent on the value of the parameter "Switching output sends" (see "Switching output")

Switching output sends on change	<ul style="list-style-type: none"> <li>• Do not send message</li> <li>• Send switching output status</li> </ul>
Switching output sends on change to 1	<ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 1 → send 1</li> </ul>
Switching output sends on change to 0	<ul style="list-style-type: none"> <li>• Do not send message</li> <li>• If switching output = 0 → send 0</li> </ul>
Switching output sends on change and periodically	Send switching output status
Switching output sends on change to 1 and periodically	If switching output = 1 → send 1
Switching output sends on change to 0 and periodically	If switching output = 0 → send 0

## 5.5. Temperature PI control

For an adequate regulation of the indoor temperature, comfort, standby, eco and building protection modes may be used.

**Comfort** when present,

**Standby** during short absences,

**Eco** as a night-time mode and

**Frost/heat protection** (building protection) during longer absences.

The settings for the temperature control include the set point temperatures for the individual modes. Objects are used to determine which mode is to be selected. A change of mode may be triggered manually or automatically (e.g. by a timer, window contact).

The **mode** may be switched with two 8 bit objects of different priority. Objects

"... HVAC mode (Prio 2)" for switching in everyday operation and

"... HVAC mode (Prio 1)" for central switching with higher priority.

The objects are coded as follows:

ID	Name	Encoding	Range	Use
20,102	DPT_HVACMode	field1 = HVACMode 0 = Auto 1 = Comfort 2 = Standby 3 = Economy 4 = Building Protection	[0 ... 4]	HVAC

Alternatively, you can use three objects, with one object switching between eco and standby mode and the two others are used to activate comfort mode or frost/heat protection mode. The comfort object then blocks the eco/standby object, and frost/heat protection objects have the highest priority. Objects

"... Mode (1: Eco, 0: Standby)",

"... comfort activation mode" and

"... frost/heat protection activation mode"

Switch mode via	<ul style="list-style-type: none"> <li>• two 8-bit objects (HVAC modes)</li> <li>• three 1-bit objects</li> </ul>
-----------------	---

Select the mode to be activated after reset (e.g. power failure, reset of the line via the bus). (Default).

Then configure a block of the temperature control by the blocking object.

Mode after reset	<ul style="list-style-type: none"> <li>• Comfort</li> <li>• Standby</li> <li>• Eco</li> <li>• <u>Building protection</u></li> </ul>
Behaviour of the blocking object at value	<ul style="list-style-type: none"> <li>• <u>1 = block   0 = release</u></li> <li>• 0 = block   1 = release</li> </ul>
Blocking object value before 1st communication	0 • <u>1</u>



Determine when the current settings of the controls are to be transmitted to the bus. Periodic transmission is safer if a message does not reach a recipient. You may also set up periodical monitoring by the actuator with this setting.

Send actuating variables	<ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change and periodically</li> </ul>
cycle <i>for periodical transmission only</i>	5 s • ... • <u>5 min</u> • ... • 2 h

The status object shows the current status of the output variable (0 = OFF, >0 = ON) and may, for example, be used for visualisations or to switch off the heating pump as soon as the heating is off.

Send status objects	<ul style="list-style-type: none"> <li>• <u>on change</u></li> <li>• on change to 1</li> <li>• on change to 0</li> <li>• on change and periodically</li> <li>• on change to 1 and periodically</li> <li>• on change to 0 and periodically</li> </ul>
cycle <i>for periodical transmission only</i>	5 s • ... • <u>5 min</u> • ... • 2 h

Then define the type of setting. Heating and/or cooling may be controlled in two levels.

Type of control	<ul style="list-style-type: none"> <li>• <u>One-stage heating</u></li> <li>• Dual-speed heating</li> <li>• Single-speed cooling</li> <li>• Single-speed heating + Single-speed cooling</li> <li>• Dual-speed heating + Single-speed cooling</li> <li>• Dual-speed heating + Dual-speed cooling</li> </ul>
-----------------	---

### 5.5.1. General set point values

You may enter separate set point values for each mode or use the comfort set point as a basic value.

If you are using the controls for both heating *and* cooling, you may also select the setting "separately with switching object". Systems used for cooling in the summer and for heating in the winter can thus be switched from one to the other.

If you are using the basic value, only the deviation from the comfort set point value is listed for the other modes (e. g., 2°C less for standby mode).

Setting the nominal values	<ul style="list-style-type: none"> <li>• <u>separate</u> with switching object</li> <li>• separate without switching object</li> <li>• with comfort set point as a basis</li> </ul>
Behaviour of the switching object at value <i>only if switching object is used</i>	<ul style="list-style-type: none"> <li>• <u>0 = Heating   1 = Cooling</u></li> <li>• 1 = Heating   0 = Cooling</li> </ul>
Switching object value before 1st communication <i>only if switching object is used</i>	<u>0</u> • 1

The grades for the set point changes is predefined. Modifications may only remain active temporarily (do not save) or remain saved even after voltage recovery (and programming). This also applies to a comfort extension.

Grading for set point changes (in 0.1 °C)	1... 50; <u>10</u>
Saving set point value(s) and comfort extension time	<ul style="list-style-type: none"> <li>• not</li> <li>• <u>after voltage recovery</u></li> <li>• after voltage recovery and programming (do not use for first start-up!)</li> </ul>

The control may be manually reset to comfort mode from eco, or night mode. This allows the user to maintain the daily nominal value for a longer time, e.g. when having guests. The duration of this comfort extension period is set. After the comfort extension period is terminated, the system returns to eco mode.

Comfort extension time in seconds (can only be activated from eco mode)	1...36000; <u>3600</u>
---	------------------------

## Set point Comfort

Comfort mode is usually used for daytime mode when people are present. A starting value is defined for the comfort set point as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication <i>not upon saving the set point value after programming</i>	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

If the comfort set point is used as the basis, a dead zone is determined for the control mode "heating *and* cooling" to avoid direct switching from heating to cooling.

Dead zone between heating and cooling <i>only if both heating AND cooling are used.</i>	1... 100; <u>50</u>
--	---------------------

## Set point for standby

Standby mode is usually used for daytime mode when people are absent.

**If set point values are entered separately:**

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

**If the comfort set point value is used as a basis:**

If the comfort set point value is used as a basis, the deviation from this value is set.

Reduce nominal heating value (in 0.1°C) <i>for heating</i>	0...200; <u>30</u>
Increase nominal cooling value\r\n (in 0.1°C) <i>for cooling</i>	0...200; <u>30</u>

**Eco set point**

Eco mode is usually used for night mode.

**If set point values are entered separately:**

A starting set point value is defined as well as a temperature range in which the nominal value may be modified.

Initial heating/cooling set point (in 0.1 °C) valid till 1st communication	-300...800; <u>210</u>
Min. object value heating/cooling (in 0.1 °C)	-300...800; <u>160</u>
Max. object value heating/cooling (in 0.1 °C)	-300...800; <u>280</u>

**If the comfort set point value is used as a basis:**

If the comfort set point value is used as a basis, the deviation from this value is set.

Reduce nominal heating value (in 0.1°C) <i>for heating</i>	0...200; <u>50</u>
Increase nominal cooling value\r\n (in 0.1°C) <i>for cooling</i>	0...200; <u>60</u>

**Set point values for frost/heat protection (building protection)**

The building protection mode is used during longer absences. Set points for frost protection (heating) and heat protection (cooling) are determined which may not be modified from outside (no access via operating devices etc.). The building protection mode

may be activated with delay, which allows you to leave the building before the controls switch to frost/heat protection mode.

Nominal value frost protection\r\n (in 0,1°C)	-300...800; <u>70</u>
Nominal value heat protection (in 0,1°C)	-300...800; <u>350</u>
Activation delay	no • 5 s • ... • <u>5 min</u> • ... • 2 h

## General variables

This setting appears for the control types "Heating *and* Cooling" only. This is where you can decide whether to use a common variable for heating and cooling. If the 2nd level has a common variable, this is also where you determine the control mode of the 2nd level.

For heating and cooling	<ul style="list-style-type: none"> <li>• <u>separate variables are used</u></li> <li>• common variables are used for Level 1</li> <li>• common variables are used for Level 2</li> <li>• common variables are used for Level 1+2</li> </ul>
Control type <i>only for level 2</i>	<ul style="list-style-type: none"> <li>• 2-point control</li> <li>• PI control</li> </ul>
Regulating variable of the 2nd Stage is on <i>only for level 2</i>	<ul style="list-style-type: none"> <li>• <u>1-bit object</u></li> <li>• <u>8-bit object</u></li> </ul>

### 5.5.2. Heating control level 1/2

If a heating control mode is configured, one or two setting sections for the heating levels are displayed.

On the 1st level, heating is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level heating), heating is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the lowest set point value from which the 2nd level is then added (when values exceed this set point).

Set point difference between levels 1 and 2 (in 0.1°C) <i>only for level 2</i>	0...100; <u>40</u>
Control type <i>only for level 2 and if no common variables are used</i>	<ul style="list-style-type: none"> <li>• 2-point control</li> <li>• PI control</li> </ul>

#### **PI control with control parameters:**

This setting allows individual input of the parameters for PI control.

Control type	• <b>PI control</b>
--------------	---------------------

Set control using	<ul style="list-style-type: none"> <li>• <b>Controller parameter</b></li> <li>• provided applications</li> </ul>
-------------------	--

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum heating power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the variable. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached.

You should set the time appropriate to the heating system at this point (note manufacturer instructions).

Maximum control variable is reached at set point/actual difference of (in °C)	0... <u>5</u>
Reset time (in min.)	1...255; <u>30</u>

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• <u>not be transmitted</u></li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

### **PI control with predetermined application:**

This setting provides fixed parameters for frequent applications.

Control type	• <b>PI control</b>
Set control using	<ul style="list-style-type: none"> <li>• Controller parameter</li> <li>• <b>provided applications</b></li> </ul>
Application	<ul style="list-style-type: none"> <li>• Warm water heating</li> <li>• Floor heating</li> <li>• Convection unit</li> <li>• Electric heating</li> </ul>
Maximum control variable is reached at set point/actual difference of (in °C)	Warm water heating: 5 Floor heating: 5 Convection unit: 4 Electric heating: 4
Reset time (in min.)	Warm water heating: 150 Floor heating: 240 Convection unit: 90 Electric heating: 100

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

### **2-point-rule (only level 2):**

The 2-point-rule is used for systems which are only set to ON or OFF.

Control type <i>is determined at a higher level for common variables</i>	• <b>2-point control</b>
---	--------------------------

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

Hysteresis (in 0.1°C)	0...100; <u>20</u>
Actuating variable is a	<ul style="list-style-type: none"> <li>• 1-bit object</li> <li>• 8-bit object</li> </ul>
Value (in %) <i>only for 8 bit objects</i>	0... <u>100</u>

Now determine what should be transmitted when the control is blocked. Set a value greater 0 (=OFF) to receive a basic heating level, e.g. for floor heating.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

### **5.5.3. Cooling control level 1/2**

If a cooling control mode is configured, one or two setting sections for the cooling levels are displayed.

On the 1st level, cooling is controlled by a PI control which allows to either enter control parameters or select predetermined applications.

On the 2nd level (therefore only in case of a 2 level cooling), cooling is controlled via a PI or a 2-point-control.

On level 2, the set point deviation between the two levels must furthermore be determined, i. e. the highest set point value from which the 2nd level is then added (when values exceed this set point).

Set point difference between levels 1 and 2 (in 0.1°C) <i>only for level 2</i>	0...100; <u>40</u>
Control type <i>only for level 2 and if no common variables are used</i>	<ul style="list-style-type: none"> <li>• 2-point control</li> <li>• PI control</li> </ul>

### **PI control with control parameters:**

This setting allows individual input of the parameters for PI control.

Control type	<ul style="list-style-type: none"> <li>• <b>PI control</b></li> </ul>
Set control using	<ul style="list-style-type: none"> <li>• <b>Controller parameter</b></li> <li>• provided applications</li> </ul>

Determine the deviation from the set point value which reaches maximum variable value, i. e. the point at which maximum cooling power is activated.

The reset time shows how quickly the controls react to deviations from the set point value. In case of a short reset time, the controls react with a fast increase of the variable. In case of a long reset time, the controls react somewhat more gently and needs longer until the necessary variable for the set point deviation is reached.

You should set the time appropriate to the cooling system at this point (note manufacturer instructions).

Maximum control variable is reached at set point/actual difference of (in °C)	0... <u>5</u>
Reset time (in min.)	1...255; <u>30</u>

Now determine what should be transmitted when the control is blocked.

Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• <u>not be transmitted</u></li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

### **PI control with predetermined application:**

This setting provides fixed parameters for a cooling ceiling

Control type	<ul style="list-style-type: none"> <li>• <b>PI control</b></li> </ul>
Set control using	<ul style="list-style-type: none"> <li>• Controller parameter</li> <li>• <b>provided applications</b></li> </ul>
Application	<ul style="list-style-type: none"> <li>• Cooling ceiling</li> </ul>
Maximum control variable is reached at set point/actual difference of (in °C)	Cooling ceiling: 5
Reset time (in min.)	Cooling ceiling: 30

Now determine what should be transmitted when the control is blocked.  
Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

### **2-point-rule (only level 2):**

The 2-point-rule is used for systems which are only set to ON or OFF.

Control type <i>is determined at a higher level for common variables</i>	• <b>2-point control</b>
---	--------------------------

Enter the hysteresis that prevents frequent on/off switching of temperatures in the threshold range. Then determine whether a 1 bit object (on/off) or an 8 bit object (on with percentage/off) should be used.

Hysteresis (in 0.1°C)	0...100; <u>20</u>
Actuating variable is a	<ul style="list-style-type: none"> <li>• 1-bit object</li> <li>• 8-bit object</li> </ul>
Value (in %) <i>only for 8 bit objects</i>	0... <u>100</u>

Now determine what should be transmitted when the control is blocked.  
Upon release, the control variable follows the rule again.

When blocked, the variable shall	<ul style="list-style-type: none"> <li>• not be transmitted</li> <li>• send a specific value</li> </ul>
Value (in %) <i>only if a value is transmitted</i>	<u>0</u> ...100

In case of a common variable for heating and cooling, 0 is always transmitted as a fixed value.

## **5.6. Variable comparator**

The two integrated control variable comparators can output maximum, minimum and median values.

Use comparator 1/2	<u>No</u> • Yes
--------------------	-----------------

### **5.6.1. Control variable comparator 1/2**

Determine what the control variable comparator should output, and activate the input objects to be used. Send behaviour and blocks can also be set.



Output delivered	<ul style="list-style-type: none"> <li>• Maximum value</li> <li>• Minimum value</li> <li>• <u>Average value</u></li> </ul>
Use input 1/2/3/4/5	No • Yes
Output sends	<ul style="list-style-type: none"> <li>• <u>on change of output</u></li> <li>• on change of output and periodically</li> <li>• when receiving an input object</li> <li>• when receiving an input object and periodically</li> </ul>
Send cycle <i>(is only sent if "periodically" is selected)</i>	5 s • 10 s • 30 s • ... • <u>5 min</u> • ... • 2 h
From change of <i>(is only sent if "on change" is selected)</i>	<u>1%</u> • 2% • 5% • 10% • 20% • 25%
Analysis of the blocking object	<ul style="list-style-type: none"> <li>• <u>at value 1: block   at value 0: release</u></li> <li>• at value 0: block   at value 1: release</li> </ul>
Blocking object value before 1st communication	0 • 1
Behaviour of the switching output	
With blocking	<ul style="list-style-type: none"> <li>• <u>do not send message</u></li> <li>• Send value</li> </ul>
Sent value in %	0 ... 100
on release, output is sent <i>(with 2 seconds release delay)</i>	<ul style="list-style-type: none"> <li>• <u>the current value</u></li> <li>• the current value after receipt of an object</li> </ul>

## 5.7. Logic

Activate the logic inputs and assign object values up to 1st communication. Then, activate the required logic outputs.

Use logic inputs	<u>No</u> • Yes
Object value prior to 1. communication for:	
Logic input 1... 16	<u>0</u> • 1

### AND logic

Logic 1/2/3/4/5/6/7/8	<u>not active</u> • active
-----------------------	----------------------------

### OR logic

Logic 1/2/3/4/5/6/7/8	<u>not active</u> • active
-----------------------	----------------------------

### 5.7.1. AND and/or OR logic 1/2/3/4/5/6/7/8

AND- and OR logic gates provide the same setting options. Assign the inputs to a switching event and set the send behaviour.

1. / 2. / 3. / 4. Input	<ul style="list-style-type: none"> <li>• <u>do not use</u></li> <li>• all switching events which are available to the sensor (siehe <i>AND logic connection inputs</i>, Seite 25)“)</li> </ul>
Logic output sends	• <u>one 1-bit object</u> • two 8-bit objects

If the logic output sends one 1-bit object:

Logic output sends	<b>one 1 bit object</b>
if logic = 1 → object value	<u>1</u> • 0
if logic = 0 → object value	<u>0</u> • 1

If the logic output sends two 8-bit objects:

Logic output sends	<b>two 8 bit objects</b>
Type of objects	<ul style="list-style-type: none"> <li>• <u>Value (0 ... 255)</u></li> <li>• Percent (0% ... 100%)</li> <li>• Angle (0°... 360°)</li> <li>• Scenario load (0 ... 127)</li> </ul>
if logic = 1 → object A value	Setting dependent on "type of object"
if logic = 0 → object A value	Setting dependent on "type of object"
if logic = 1 → object B value	Setting dependent on "type of object"
if logic = 0 → object B value	Setting dependent on "type of object"
Send behaviour	<ul style="list-style-type: none"> <li>• <u>on change of logic</u></li> <li>• on change of logic to 1</li> <li>• on change of logic to 0</li> <li>• on change of logic and periodically</li> <li>• on change of logic to 1 and periodically</li> <li>• on change of logic to 0 and periodically</li> <li>• on change of logic + receipt of object</li> <li>• on change of logic + receipt of object and periodically</li> </ul>
Send cycle (is only sent if "periodically" is selected)	<u>5 s</u> • 10 s • 30 s • 1 min • ... • 2 h

### Block

Logic outputs can also be blocked using objects.

Analysis of the blocking object	<ul style="list-style-type: none"> <li>• <u>at value 1: block</u>   at value 0: release</li> <li>• at value 0: block   at value 1: release</li> </ul>
Blocking object value before 1st communication	<u>0</u> • 1

Behaviour of the switching output	
With blocking	<ul style="list-style-type: none"> <li>• do not send message</li> <li>• send value for logic = 0</li> <li>• send value for logic = 1</li> </ul>

Behaviour on release of the switching output is dependent on send behaviour

Value of the parameter "Send behaviour":	Settings options "Behaviour of the switching output on release":
on change of logic	<ul style="list-style-type: none"> <li>• do not send message</li> <li>• send value for current logic status</li> </ul>
on change of logic to 1	<ul style="list-style-type: none"> <li>• do not send message</li> <li>• if logic = 1 → send value for 1</li> </ul>
on change of logic to 0	<ul style="list-style-type: none"> <li>• do not send message</li> <li>• if logic = 0 → send value for 0</li> </ul>
on change of logic and periodically	send value for current logic status (no selection)
on change of logic to 1 and periodically	if logic = 1 → send value for 1 (no selection)
on change of logic to 0 and periodically	if logic = 0 → send value for 0 (no selection)
on change of logic and receipt of object	<ul style="list-style-type: none"> <li>• do not send message</li> <li>• Status object/s send/s</li> </ul>
on change of logic and receipt of object and periodically	send value for current logic status (no selection)

## 5.7.2. AND logic connection inputs

do not use

Logic input 1

Logic input 1 inverted

Logic input 2

Logic input 2 inverted

Logic input 3

Logic input 3 inverted

Logic input 4

Logic input 4 inverted

Logic input 5

Logic input 5 inverted

Logic input 6

Logic input 6 inverted

Logic input 7

Logic input 7 inverted

Logic input 8

Logic input 8 inverted

Logic input 9

Logic input 9 inverted

Logic input 10  
Logic input 10 inverted  
Logic input 11  
Logic input 11 inverted  
Logic input 12  
Logic input 12 inverted  
Logic input 13  
Logic input 13 inverted  
Logic input 14  
Logic input 14 inverted  
Logic input 15  
Logic input 15 inverted  
Logic input 16  
Logic input 16 inverted  
Temperature sensor malfunction = ON  
Temperature sensor malfunction = OFF  
Switching output temperature 1  
Switching output temperature 1 inverted  
Switching output temperature 2  
Switching output temperature 2 inverted  
Switching output temperature 3  
Switching output temperature 3 inverted  
Switching output temperature 4  
Switching output temperature 4 inverted  
Temp. control status changeover switching object  
Temp. control status changeover switching object inverted  
Temp. control status heating 1  
Temp. control status heating 1 inverted  
Temp. control status heating 2  
Temp. control status heating 2 inverted  
Temp. control status cooling 1  
Temp. control status cooling 1 inverted  
Temp. control status cooling 2  
Temp. control status cooling 2 inverted  
Temp. control status night reduction  
Temp. control status night reduction inverted  
Temp. control status window  
Temp. control status window inverted

---

### 5.7.3. Connection inputs of the OR logic

---

The OR logic connection inputs correspond to those of the AND logic. In addition the following inputs are available for the OR logic:

AND logic 1  
AND logic output 1 inverted  
AND logic output 2  
AND logic output 2 inverted  
AND logic output 3

AND logic output 3 inverted  
AND logic output 4  
AND logic output 4 inverted  
AND logic output 5  
AND logic output 5 inverted  
AND logic output 6  
AND logic output 6 inverted  
AND logic output 7  
AND logic output 7 inverted  
AND logic output 8  
AND logic output 8 inverted

## Questions about the product?

---

You can reach the technical service of Elsner Elektronik under  
**Tel. +49 (0) 70 33 / 30 945-250** or  
**service@elsner-elektronik.de**

We need the following information to process your service request:

- Type of appliance (model name or item number)
- Description of the problem
- Serial number or software version
- Source of supply (dealer/installer who bought the device from Elsner Elektronik)

For questions about KNX functions:

- Version of the device application
- ETS version used for the project

---

**elsner**

**Elsner Elektronik GmbH** Control and Automation Engineering

Sohlengrund 16  
75395 Ostelsheim  
Germany

Phone +49 (0) 70 33 / 30 945-0 info@elsner-elektronik.de  
Fax +49 (0) 70 33 / 30 945-20 www.elsner-elektronik.de

---